

Manual **EN**

BM Series Modified Sine Wave Inverter

Preface

Thank you for purchasing our Power Inverter. It is a compact and highly portable power inverter Which has an excellent track record in the field of high frequency inverter. From the 12V/24V/48V DC outlet in your vehicle or boat, or directly from a dedicated 12V/24V/48V DC battery,this inverter can efficiently and reliably power a wide variety of house hold AC products, such as TV, Computers,Air-conditioner etc. Please read this guide before installing or using the inverter and save it for future reference.

Due to our continuous work to upgrade and improve our products, we may change or revise the contents of this manual instructions or any part of it without giving any further notice.

Contents

1、Models and Denotations	1
2、Safety FIRST	2-3
3、Product Features and Applications	4
4、Pure sine wave and modified sine wave inverters	5
5、Guidelines	6-10
6、Uninterruptible Power Usage	11
7、Trouble Shooting.....	12-15
8、Warranty	16-17
9、Certificate	18
10、Warranty registration card	19
11、Specification	20

◆ Models and Denotations



75W、100W、150W、200W、300W、500W、600W、800W、
1000W、1200W、1500W、2000W、2500W、3000W、4000W、
5000W、6000W、8000W、1000W;
1210、1215、1220、1230、1250、2410、2415、2420;
1205、2405、1210、2410、1215、2415、1220、2420、1230.
2430、1250、2450、1260、2460、1280、2480、12100、24100;

P:Pure sine wave inverter M:Modified srne wave inverter

PU:Pure sine wave inverter with charger

MU:Modified sine wave inverter with charger

CH:Battery charger SY:Movable solar power system;

◆ Safety First



WARNING! Shock hazard. Keep away from children.

1-1. The inverter generates the same potentially lethal AC power as a normal household wall outlet. Treat it as if you are using any other AC outlet.

1-2. Do not insert foreign objects into the inverter's AC outlet, fan or vent openings.

1-3. Do not expose the inverter to water, rain, snow or spray.

1-4. Do not under any circumstance, connect the inverter to AC power.



WARNING! Heated surface.

1-5. The inverter housing may become uncomfortably warm, reaching 140F(60℃) under extended high power operation. Ensure at least 2 inches (5cm) of air space is maintained on all sides of the inverter. During operation, keep away from materials that may be affected by high temperature.



WARNING! Explosion hazard.

1-6. Do not use the inverter in the presence of flammable fumes or gases, such as in the bilge of a gasoline powered boat, or near a propane tanks. Do not use the inverter in

◆ Safety First

an enclosure containing automotive-type, lead-acid batteries. These batteries, unlike sealed batteries, emit explosive hydrogen gas which can be ignited by sparks from electrical connection.



CAUTION!

1-7. Do not connect live AC power to the inverter's AC outlets. The inverter will be damaged even if it is switched OFF.

1-8. Do not expose the inverter to temperatures exceeding 104°F (40°C).



CAUTION! Do not use the inverter with the following equipment:

1-9. Small battery operated products such as rechargeable flashlights, some rechargeable shavers, and nightlights that are plugged directly into an AC receptacle to recharge.

1-10. Certain battery chargers for battery packs used in hand powered tools. These chargers will have warning labels stating that dangerous voltages are present at the charger's battery terminals.

1-11. Note DC voltage of battery should be similar to input DC voltage of power inverter (for example DC12V of battery should be connected with input voltage 12V of the inverter).

◆ Product Features And Applications

Product Features

- Pure sine wave or modified sine wave
- Soft start
- PWM(Pulse Width Modulation)
- Microprocessor based design
- With power ON/OFF switch and LED indicator
- Overload protection / Over voltage protection / Short Circuit protection / Over temperature protection / Reverse polarity protection (by fuses)

Product Applications

Power tools series: Electric Saw, Drilling Machine, Grinder, Sand blast Machine, Punching Machine, Weeding Machine, Air Compressor etc.

Office series: Computer, Printer, LCD Monitor, Scanning Machine etc.


Household Appliance series: Dust Collector, Fan, Lamp or LED, Sewing Machine etc.

Kitchen Appliance series: Microwave Oven, Fridge, Freezer, Coffemaker,

◆ Pure sine wave and modified sine wave inverters

The inverter come in two types: pure sine wave power type and modified sine wave type. In the pure sine wave power inverter. the 240V AC output harmonically follows a smooth sine wave and is almost identical to normal mains electricity. As a result, the pure sine wave output would be better for most appliances than the modified sine wave output.

A Graphic Comparison of Modified Sine Wave and Pure Sine Wave is shown below:

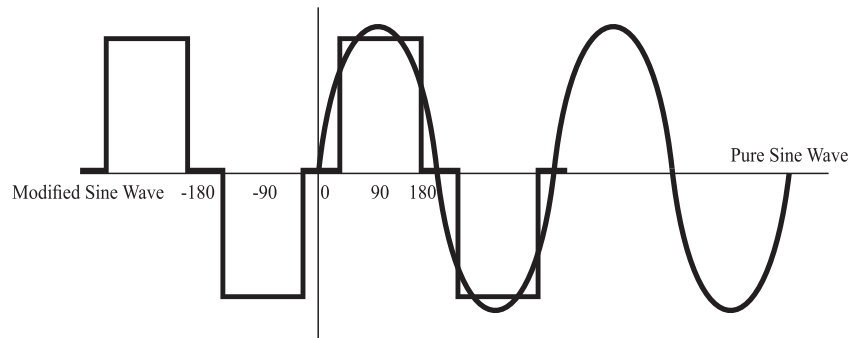

◆ Guidelines

Installation Conditions

For safe and optimum performance. install the inverter in a location that is :

3-1-1. Dry - Do not expose to water drip or spray.

3-1-2. Cool - Operate only in ambient temperatures between 32F (0°C) and 104F (40°C). Keep away from heating vents or other heat producing equipment.

3-1-3. Safe - Do not install inverter in a compartment with batteries or flammable liquids, such as gasoline or explosive vapors.

3-1-4. Well ventilated - Allow at least 2 inches (5cm) clearance above and on all sides of the unit for proper cooling.

3-1-5. Clean and free of dust and dirt -This is especially important if the Jazz inverter is used in a dusty working environment. Select a Suitable Location.

◆ Guidelines

Working Principle

The inverter works in two stages. During the first stage, the DC to DC converter increases the DC input voltage from the power source (eg. A 12V battery) to 300V DC. In the second stage, the high voltage DC is converted to the watts you need (AC) using advanced power MOSFET transistors or IGBT technology in a full bridge configuration. The result is excellent overload capability and the capacity to operate difficult reactive loads.

Connection Method

3-3-1. Attached the ring type connector marked with red to the positive (+) DC terminal on the inverter and attach the ring connector marked with black to the negative (-) DC terminal.



CAUTION!

A reverse polarity connection (positive to negative) may damage the inverter (Fuse). Damage caused by a reverse polarity connection would probably invalidate your warranty.



WARNING: Sparking may occur when connecting the unit to the battery, make sure no flammable fumes are present before making any connections.

◆ Guidelines

3-3-2. Tighten the nut on each DC terminal by hand until it is snug. If the power more than 1800W, please use tools to tight up the screw.

3-3-3. When the inverter is not in use, unplug it from the 12V/24V/48V DC outlet to avoid the battery's discharge.



CAUTION: Before using the inverter, please provide a ground connection wire. On the rear panel of the inverter is a terminal fitted with a nut for connecting to the inverter and to the earth terminal of the AC output socket. Please choose heavy duty, insulated green/yellow wire. Drive into the ground to a depth of 1-2m or more. In a vehicle, connect the inverter to the chassis of the vehicle. In a boat, connect to the boat's grounding system. Battery's Charge

We advise that please use deep cycle battery. If you hear the low voltage alarm, please stop the inverter immediately. When the battery is fully charged, the inverter can be used again. If you use the inverter in a car, then it would be necessary to run the engine of your car after each time you use the inverter. You can run the engine for 10 minutes or so to recharge the battery.

◆ Guidelines

Inverter's Working Status

3-5-1. When a 12V/24V/48V DC outlet or battery properly connected to the inverter, turn on the ON/OFF, the green Power indicator will light, and it deliver AC power to the outlets.

3-5-2. Plug the AC appliances you wish to operated into the AC outlet(s) and switch your appliances on, switch one at a time.

 **NOTICE: When connect to the appliances, remember to turn on the inverter before turn on the appliance.**

3-5-3. If the audible alarm be ignored the inverter may be automatically. shut down when the battery voltage drops to 9.8-10.2V / 19.6 -20.4V / 39.2 -40.8V. in order to prevent damage to the battery from excessive discharge.


3-5-4. If the AC appliances rated power is higher than inverters rating(or the appliance draws excessive surge power), the inverter will shut down. The red FAULT indicator will light.

3-5-5. If the inverter exceeds a safe operating temperature, due to insufficient ventilation or a high surrounding temperature , it will automatically shut down. The red FAULT indicator will light and the audio warning alarm will sound.

◆ Guidelines


3-5-6. If a defective battery charge system has caused the battery voltage to rise to a dangerously high level, the inverter will automatically shut down.

3-5-7. The cooling fan is designed to operate only when the temperature goes up or when the loads are applied.

 **CAUTION: Although the inverter incorporates the protection function against over-voltage, There would be still the possibility of getting the unit damaged if the input voltage exceeds 16V/32V/64V.**

◆ Uninterruptible Power Usage

Example: Connection of uninterruptible power supply 2000w to Battery

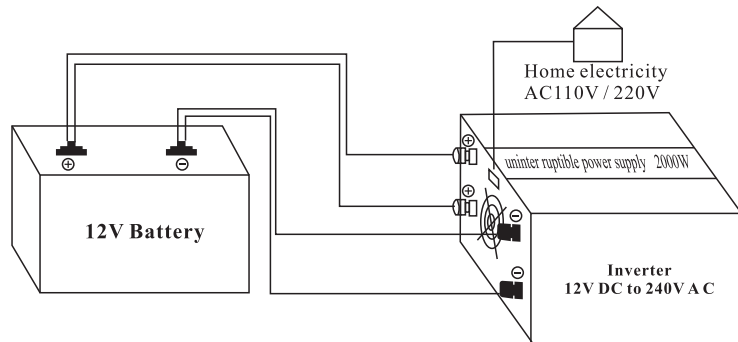

Grid Priority : When electricity AC220V disconnected, battery power supply.
When connected to the electricity AC220V ,
household electricity to the accumulator, household electric power supply.

◆ Trouble Shooting

AC appliances do not work, and the green power indicator does not light.

CAUSES	SOLUTION
Bad battery	Check the battery, replace it if necessary
Revers connection of negative and positive poles	correct the connection to battery, the inverter may be damaged. Replace the fuse inside inverter (outside warranty cover)
Untight connection of cables	Check the cables and the connection, screw tight the wiring terminal

◆ Trouble Shooting

AC appliances do not work, and the green power indicator does not light.

CAUSES	SOLUTION
Bad battery	Check the battery, replace it if necessary
Revers connection of negative and positive poles	correct the connection to battery. the inverter may be damaged. Replace the fuse inside inverter (outside warranty cover)
Untight connection of cables	Check the cables and the connection, screw tight the wiring terminal

◆ Trouble Shooting

The measured output current of the inverter is too low

CAUSES	SOLUTION
The range of reading of common ammeter is too small	Measure " modified sine wave " with a " real effective value multimeter " to get the accurate data
Too low current of the inverter	Charge the battery or change battery

◆ Trouble Shooting

The inverter gives out alarm sound.

CAUSES	SOLUTION
Low voltage alarm	Shorten the wire or use wider cable. Charge the battery.
Over temperature protection	Make the inverter get cooler. Improve ventilation around the inverter. Place the inverter at a cool place. Feed the load according to requirements.
AC appliances draw too much power	Use bigger power inverter
Poor connection	Check the connection and tighten it.

◆ Warranty

Our factory(dealer) warranty for the product.

Limited product warranty and exclusions:

We provide a limited warranty that covers defects of the products you ordered caused by material or manufacturing faults. The warranty period is for 12 months and begins on the date of purchase by the original end user.

This limited warranty is made only to the original purchaser of the unit, and is not transferable to any subsequent owner.

We will, at its option, repair or replace the defective component(s) free of charge, Provide that our factory is no-tified of the defect during the warranty period and a dated proof of purchase is furnished. We reserve the right to inspect the faulty component (s) and determine if the defect is due to material or manufacturing flaws. We also reserve the right to charge for service time expended if the defect is not due to material or manufacturing flaws or is not for some other reason subject to this limited warranty.

We are not warrant unit from any and all defects or damage caused by:

a. Normal wear and tear

◆ Warranty

- b.Shipping or transportation damages
- c.Improper use or installation
- d.Expose to unsuitable environment conditions (including but not limited to damage due to lightning strikes)
- e. Unauthorized or abnormal use or operation
- f. Negligence or accidents
- g.Material or workmanship not provided by us
- h.This warranty does not cover costs related to remove, installation, or troubleshooting of your electrical systems we will, at its option, use new and / or reconditioned parts in performing warranty repair and in building replacement products .

We reserves the right to use parts or products of original or improved design in the repair or replacement. If we repairs or replace product, its warranty continues for the remaining portion of the original warranty period expires later. All replaced products and all parts removed from repaired products become the property of us. We covers both parts and labour necessary to repair the product and return shipment to the customer, via a our selected non-exp edited freight carrier within installation, removal or reinstallation of the unit.

◆ Certificate

Certificate

Name _____

Model _____

Inspection _____

Date _____

Inspection of the product by the,
Permitted to leave the factory.

◆ Warranty registration card

Warranty registration card

- This certificate shall be effective feedback, Please fill in the following content
- Ask users to fill out

The time of purchase			
The user name		Zip code	
Contact telephone number			
The detailed address			

Note: The warranty period of 12 months

◆ Specification

Model	BM-1500W			BM-2000W			BM-3000W		
Type	B12M1500-1/ B12M1500-2/ B24M1500-1/ B24M1500-2/ B48M1500-1/ B48M1500-2			B12M2000-1/ B12M2000-2/ B24M2000-1/ B24M2000-2/ B48M2000-1/ B48M2000-2			B12M3000-1/ B12M3000-2/ B24M3000-1/ B24M3000-2/ B48M3000-1/ B48M3000-2		
Rated Power	1500W			2000W			3000W		
Peak Power	3000W			4000W			6000W		
Frequency	50HZ/60HZ								
Output Efficiency	≥ 88%								
AC Regulation	THD < 3% (linear load)								
DC Voltage	12V	24V	48V	12V	24V	48V	12V	24V	48V
DC Voltage Range	10-15.5V	20-31V	40-61V	10-15.5V	20-31V	40-61V	10-15.5V	20-31V	40-61V
Low Voltage Alarm	10.5±0.5V	21±0.5V	42±1V	10.5±0.5V	21±0.5V	42±1V	10.5±0.5V	21±0.5V	42±1V
Low Voltage Shut Down	10±0.5V	20±0.5V	40±1V	10±0.5V	20±0.5V	40±1V	10±0.5V	20±0.5V	40±1V
Over Voltage Shut Down	15.5±0.5V	31±0.5V	61±1V	15.5±0.5V	31±0.5V	61±1V	15.5±0.5V	31±0.5V	61±1V
Low Voltage Recovery	13±0.5V	24±0.5V	48±1V	13±0.5V	24±0.5V	48±1V	13±0.5V	24±0.5V	48±1V
Over Voltage Recovery	14.8±0.5V	29.5±0.5V	59±1V	14.8±0.5V	29.5±0.5V	59±1V	14.8±0.5V	29.5±0.5V	59±1V
AC Voltage	120V (±5%) or 230v (±5%)								
USB Outlet	5V/2.1A								
Working Temp	(-10℃ - +50℃)								
Storage Temp	(-30℃ - +70℃)								
Protection	Low Voltage								
	Over Voltage								
	Over Load								
	Over Temp								
	Short Circuit								
Rproduct Size (mm)	355.7*207*86.5			415.7*207*86.5			445.7*207/86.5		
Packing Size (mm)	400*280*155			460*280*155			505*280*155		
N.W/G.W (kg)	3.25/3.85			4.25/4.9			5.2/5.95		